

**The Facts:**

- The best advice for driving in bad winter weather is to not drive at all. Don't go out until the snow plows and sanding/salting trucks have had a chance to do their work, and allow yourself extra time to reach your destination.
- If you must drive, make sure your vehicle is prepared and that you know how to handle adverse road conditions. Consult your vehicle's owner's manual for winter weather driving instructions.

**Driving Safety Tips for Snow / Ice Covered Roads:**

- Decrease your speed and leave yourself plenty of room to stop.
- You should allow at least three times more space than usual between you and the vehicle in front of you.
- Brake gently to avoid skidding. If your wheels start to lock up, ease off the brake.
- Turn on your lights to increase your visibility to other motorists.
- Keep your lights and windshield clean.
- Use low gears to keep traction, especially on hills.
- Don't use cruise control or overdrive on icy roads.
- Be especially careful on bridges, overpasses and infrequently traveled roads, which will freeze first. Even at temperatures above freezing, if the conditions are wet, you might encounter ice in shady areas or on exposed roadways like bridges.
- Don't pass snow plows or salt/sand trucks. The drivers have limited visibility, and you're likely to find the road in front of them worse than the road behind.
- Don't assume your vehicle can handle all conditions. Even four-wheel and front-wheel drive vehicles can encounter trouble on winter roads.

**Rear Wheel Skid:**

- Take your foot off the accelerator.
- Steer in the direction you want the front wheels to go. If your rear wheels are sliding left, steer left. If they're sliding right, steer right.
- If your rear wheels start sliding the other way as you recover, ease the steering wheel toward that side. You might have to steer left and right a few times to get your vehicle completely under control.
- If you have standard brakes, pump them gently.
- If you have anti-lock brakes (ABS), do not pump the brakes. Apply steady pressure to the brakes. You will feel the brakes pulse, which is normal.

**Front Wheel Skid:**

- Take your foot off the gas and shift to neutral, but don't try to steer immediately.
- As the wheels skid sideways, they will slow the vehicle and traction will return. As it does, steer in the direction you want to go. Then put the transmission in "drive" or release the clutch, and accelerate gently.

**Vehicle Stuck in Snow:**

- Do not spin your wheels. This will only dig you in deeper.
- Turn your wheels from side to side a few times to push snow out of the way.
- Use a light touch on the gas, to ease your car out.
- Use a shovel to clear snow away from the wheels and the underside of the car.
- Pour sand, kitty litter, gravel or salt in the path of the wheels, to help get traction.
- Try rocking the vehicle. (Check your owner's manual first -- it can damage the transmission on some vehicles.) Shift from forward to reverse, and back again. Each time you're in gear, give a light touch on the gas until the vehicle gets going.





